


FUEL PUMP RESISTOR

COMPONENTS

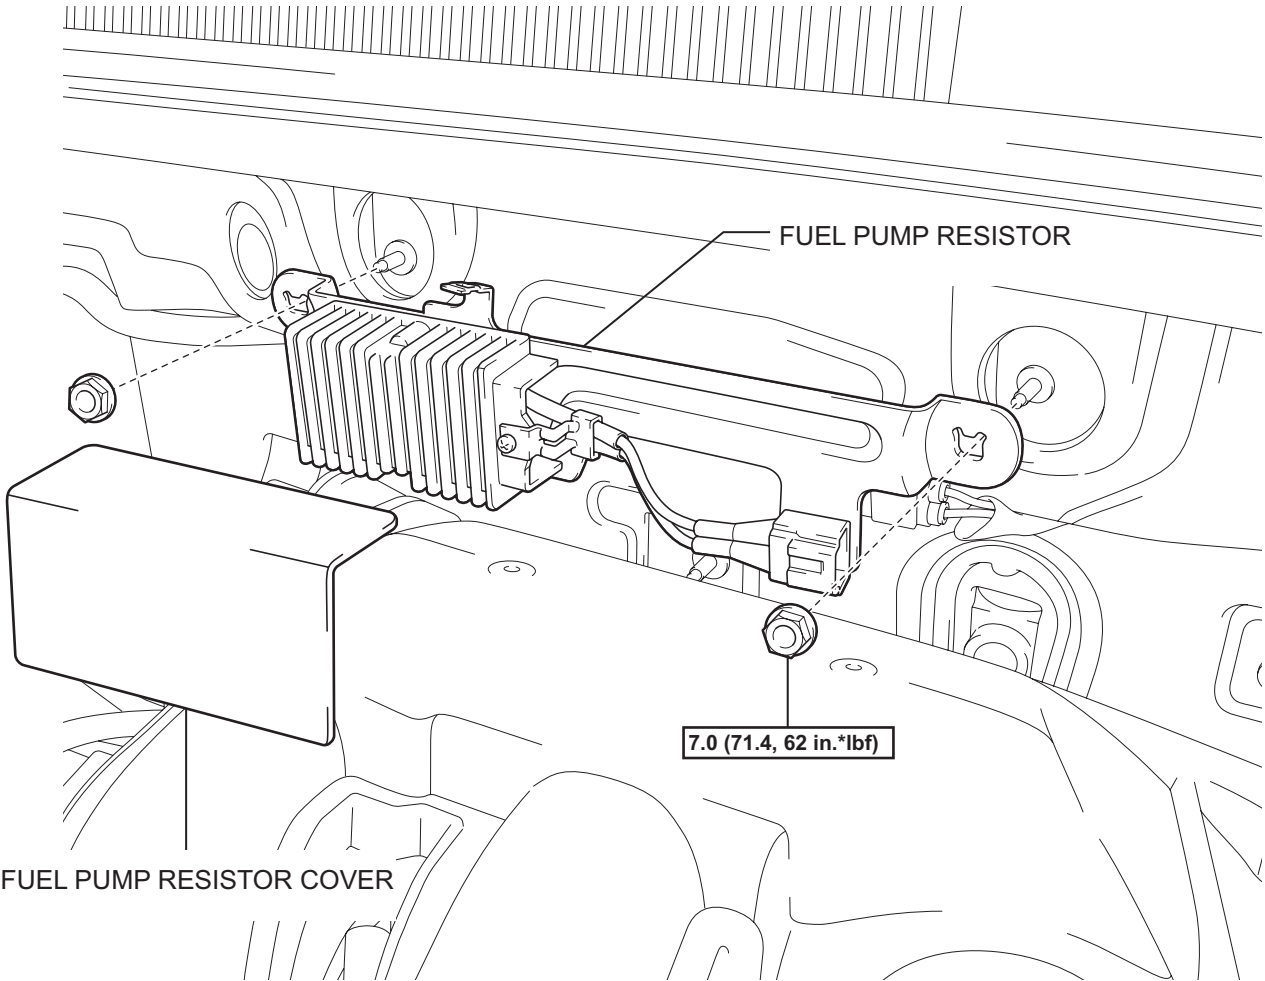

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE FUEL PUMP RESISTOR COVER**

(a) Remove the cover from the resistor.

3. **REMOVE FUEL PUMP RESISTOR**

(a) Disconnect the connector.

(b) Remove the 2 bolts and resistor.

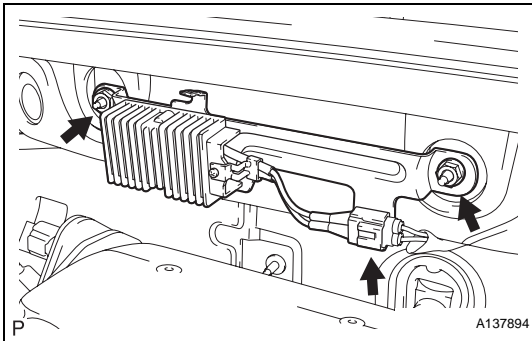

INSPECTION


1. **INSPECT FUEL PUMP RESISTOR**

(a) Inspect the fuel pump resistor resistance.

(1) Measure the resistance between the terminals.

Standard resistance:

0.53 to 0.57 Ω at 20°C (68°F)

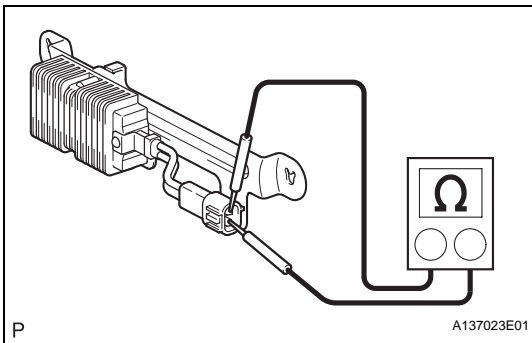

INSTALLATION

1. **INSTALL FUEL PUMP RESISTOR**

(a) Install the resistor with the 2 bolts.

Torque: 7.0 N*m (71.4 kgf*cm, 62 in.*lbf)

(b) Connect the connector.

2. **INSTALL FUEL PUMP RESISTOR COVER**

(a) Install the cover to the resistor.

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

